






**SUPER E & G CARBURETOR
TUNING GUIDE**

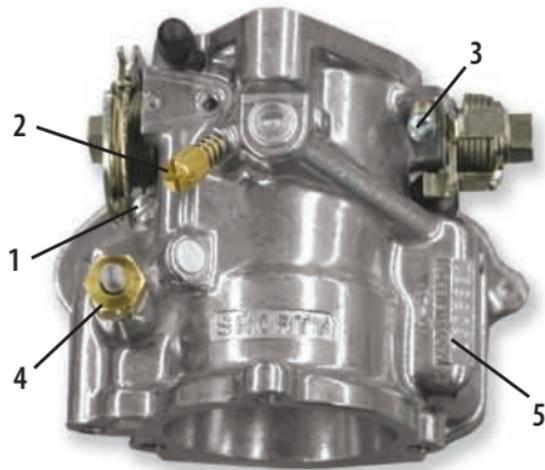

- 1- Idle Speed Screw
- 2- Idle Mixture Screw
- 3- Accelerator Pump Adjustment Screw
- 4- Enrichment Device
- 5- Serial Number

- 6- Overflow Tube Fitting
- 7- Fuel Inlet
- 8- Bowl Vent Hole
- 9- Bowl Plug

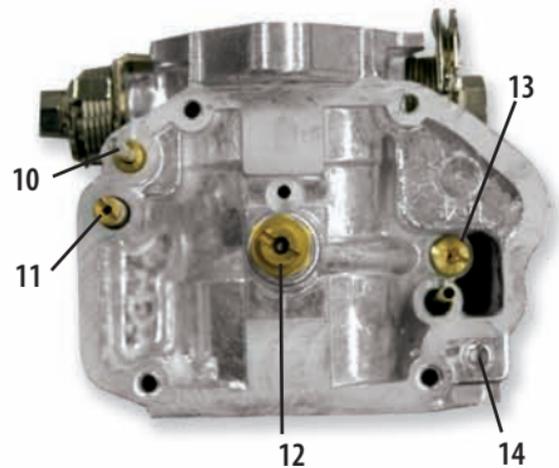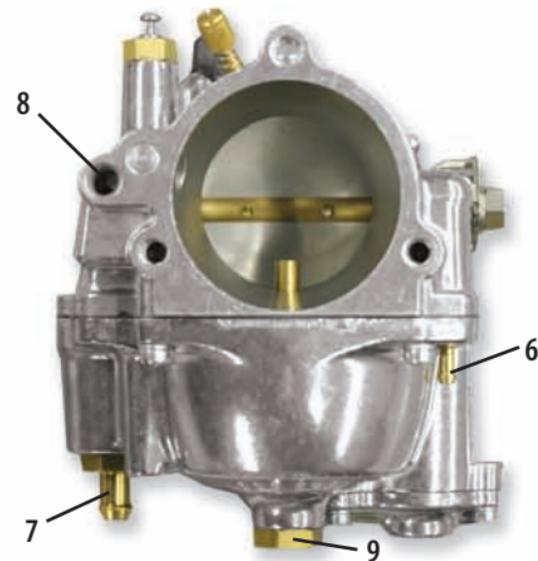

- 10- Accelerator Pump Pushrod
- 11- Intermediate Jet
- 12- Main Jet
- 13- Main Jet Air Bleed
- 14- Auxiliary Bowl Vent Plug

QUICK TUNING STEPS

- 1- Verify carburetor is set to stock settings:
 - a- Idle Mixture Screw, 1¼ turns from lightly seated.
 - b- Idle Speed Screw, ½ turn clockwise from engagement point.
 - c- Accelerator Adjustment Screw, two turns counter-clockwise from seated.
- 2- Start bike, bring to operating temperature.
- 3- Set Idle Speed Adjusting Screw, clockwise to increase rpm, counter-clockwise to decrease rpm. Idle rpm range should be 950 to 1050 rpms.
- 4- Adjust idle mixture by turning Idle Mixture Screw slowly clockwise until the engine runs poorly. Slowly turn the screw counter-clockwise until it runs smoothly—if you go too far the engine will start to stumble.
- 5- With engine idling, turn Accelerator Adjustment Screw clockwise until it lightly seats. Snap throttle open—engine should stumble. Turn screw counter-clockwise ¼ or ½ of a turn at a time, until engine responds to throttle twist with smooth, quick response.
- 6- Ride motorcycle in various rpm ranges, and then try to maintain a consistent 40- to 50-mph. If the engine is popping or sneezing in the air cleaner it can indicate a lean condition. If you notice stumbling or sputtering it can indicate a rich condition.
- 7- Low rpm operation is controlled by the intermediate jet (#11) if coughing or popping is experienced below approximately 3000 rpm's the intermediate jet must be replaced with a larger sized (richer) jet. If the engine is sluggish or does not want to idle smoothly a smaller (leaner) intermediate jet needs to be installed. Always readjust the idle mixture (#2) and idle speed (#1) screws after making a jet change.
- 8- To test the Main Jet, do a roll-on from 50-mph to 70-mph in 3rd gear. If the engine back fires or breaks up in the carb, increase the Main Jet size .004". If the engine is flat or will not accelerate, decrease the Main Jet by .004".
- 9- Since 2004 S&S Shorty carbs have been fitted with an adjustable main jet air bleed (#13). Changing this jet to one of a larger size will delay the signal to the main jet, therefore aiding with high speed tuning as described in step 8. This also aides with tuning an engine that is fitted with an exhaust system that is not intended for high performance.
- 10- NOTE: Drag or straight pipes can prevent you from obtaining optimum carburetor performance.
- 11- If the S&S teardrop air cleaner is being replaced with an aftermarket air cleaner be sure to remove the auxiliary bowl vent screw (#14). Never use a velocity stack on a street driven motorcycle! Poor throttle response will be experienced.
- 12- Always be sure to attach the hose to the overflow tube fitting (#6) and route it towards the back of the engine.



S&S® Cycle, Inc.
235 Causeway Blvd.
La Crosse, WI 54603
www.sscycle.com

For more information or to find the dealer closest to you, please visit our website.